




# Smart Ceiling Fan CLF521S

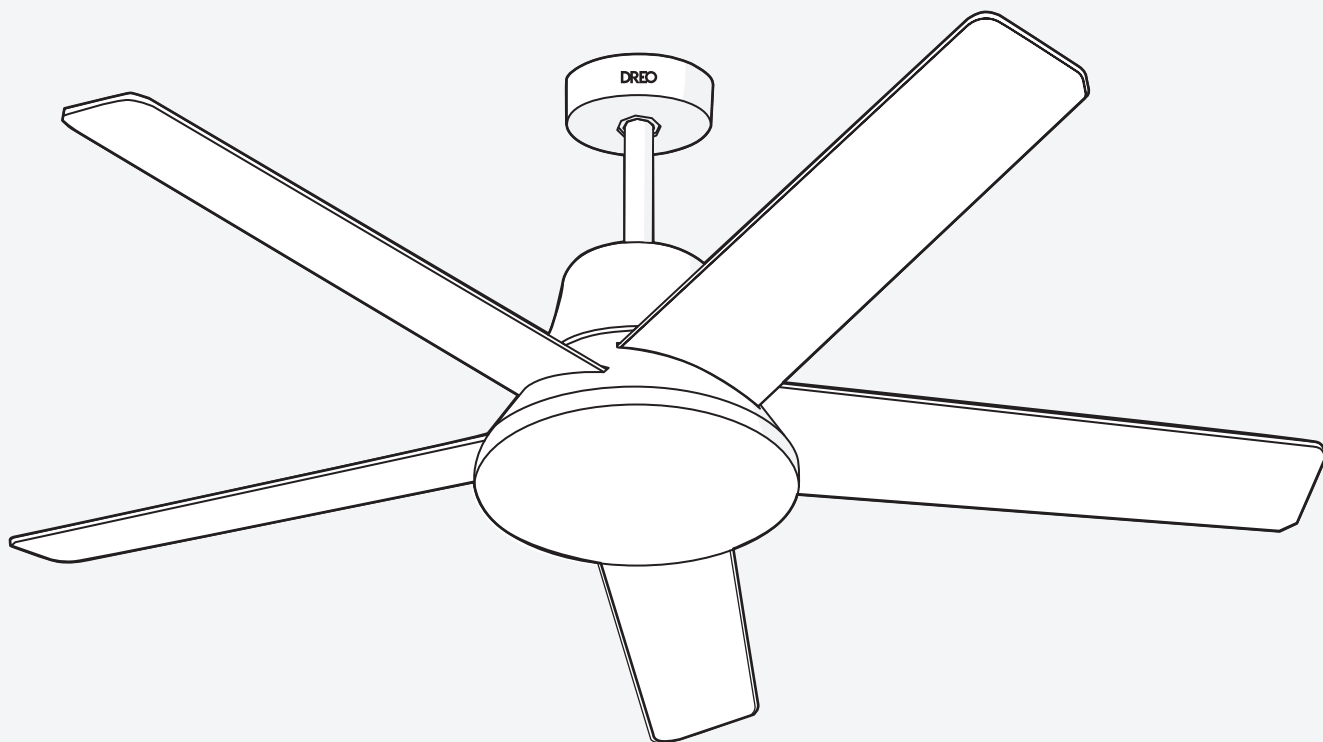

## USER MANUAL

Thanks for Choosing

**DREO!**

Your support means the world to us.

We hope you enjoy our product as much as we did creating it.

# CONTENTS

|                                   |       |
|-----------------------------------|-------|
| 01 IMPORTANT SAFETY INSTRUCTIONS  | 1     |
| 02 PACKAGE CONTENTS               | 2     |
| 03 BEFORE INSTALLATION            | 3     |
| 04 ASSEMBLING THE CEILING BRACKET | 4     |
| 05 ASSEMBLING THE BLADES          | 5     |
| 06 ASSEMBLING THE DOWNROD         | 6-7   |
| 07 HANGING YOUR CEILING FAN       | 8     |
| 08 ASSEMBLING THE LIGHT KIT       | 9     |
| 09 USING YOUR CEILING FAN         | 10-13 |
| 10 CONNECTING YOUR CEILING FAN    | 14    |
| 11 CLEANING AND MAINTENANCE       | 15    |
| 12 TROUBLESHOOTING                | 16    |
| 13 DREO CUSTOMER CARE             | 17    |

# IMPORTANT SAFETY INSTRUCTIONS

# 01

## READ AND SAVE THESE INSTRUCTIONS

- 1. WARNING:** To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount Directly To A Structural Framing Member Or To An Outlet Box Marked Acceptable for Fan Support of 15.9 kg (35 lbs). For Outlet Box Mounting, Use Mounting Screws Provided With The Outlet Box.
2. To avoid possible electrical shock, before installing or servicing your fan, disconnect the power by turning off the circuit breakers to the outlet box and associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
3. To reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch.
- 4. WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the blade brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
5. Chemical burn hazard. Keep batteries away from children. This remote contains a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
6. Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from the product.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. It is recommended that children be supervised to ensure that they are not using the appliance improperly.
- 8. WARNING:** To reduce the risk of fire or electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).
9. Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
10. Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
11. Make sure all electrical connections comply with local law and the national electrical code. Please hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
12. Make sure the installation site is roomy enough to allow fan blades to rotate. There is at least seven feet from the floor to fan blades' tips.
13. If you are mounting the fan on a ceiling outlet box, please use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the rotating fan (at least 35 lbs). Do not use a plastic outlet box. Attach the mounting bracket using the ceiling outlet box's hardware.
14. After installing the fan, make sure all the connections are secured so that the fan won't fall.
15. Do not insert anything between fan blades while the fan is operating.
16. Turn the fan off and wait for it to stop before reversing fan's rotating direction.
- 17. WARNING:** To reduce the risk of electrical shock and personal injury, do not install the fan on a sloped ceiling and do not use this fan with any solid-state fan speed control device, or rheostat. You must install the outlet box using the two steel screws and lock washers coming with the fan.
18. All wiring must be in accordance with national and local electrical codes ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.
19. After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
20. The splices after being made should be turned upward and pushed carefully up into the outlet box.
21. Instructions for supply connections: the white conductor of a fan identified as grounded conductor to be connected to a grounded conductor of power supply, the black conductor of fan identified as ungrounded conductor to be connected to an ungrounded conductor of power supply, the green conductor of fan identified for equipment grounding to be connected to an equipment-grounding conductor.
22. The total weight of the fan install to outlet box is 6.9 kg, check that the outlet box is securely installed in place such that it is able to support at least the fan weight.
23. When mounted directly to the building structure, appliance installation shall not expose combustible material and do not install the appliance to a ceiling with combustible finish. The installation of the appliance cannot leave the wood of the rafters or any thermal insulation exposed to the interior of the room.
24. To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.

## FOR HOUSEHOLD USE ONLY

### Gentle Reminder:



Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Components or parts are damaged.
- Loud noise or unusual smell.

### Specifications

|                        |            |
|------------------------|------------|
| Model No.              | DR-HCF001S |
| Power Supply           | 120V 60HZ  |
| Rated Power            | 54W        |
| Remote Control Battery | CR2025 3V  |


PACKAGE CONTENTS

02



To ensure a successful installation,  
first **SCAN** the QR code to watch the installation video

If you need help, we also provide support at 1.888.290.1688 or visit us at [www.dreo.com](http://www.dreo.com).

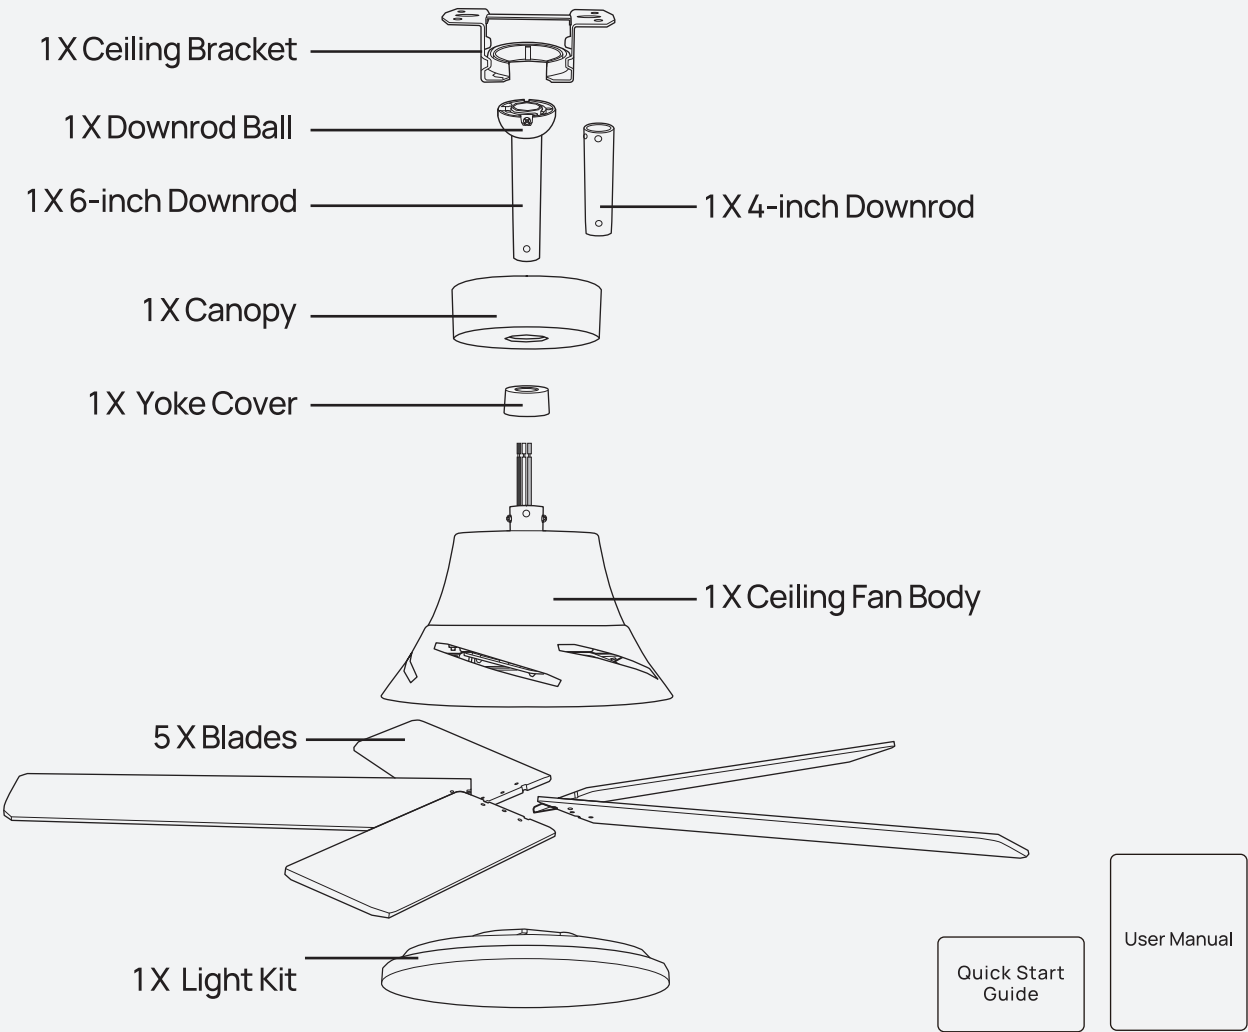


| 1 Parts for Ceiling Bracket                                                                                            | 2 Parts for Blades                                                                                          | 3 Parts for Downrod                                                                                   | 4 Parts for Remote Control Holder                                                                                          |
|------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <br>Wood Screws X 2                 | <br>Screw X 15+2(extra)  |                                                                                                       | <br>Wall-mounted Screw X 2            |
| <br>Washer X 2                      | <br>Washer X 15+2(extra) | <br>Yoke Cover X 1 | <br>3M Glue X 1                       |
| <br>Wire Connector Cap X 3+1(extra) | <br>Balancing Weight X 2 |                                                                                                       | <br>Remote Control (Battery Included) |
|                                                                                                                        | <br>Balancing Clip X 1   |                                                                                                       | <br>Remote Control Holder             |
|                                                                                                                        |                                                                                                             |                                                                                                       | <br>Remote Control Instruction Card   |

# BEFORE INSTALLATION

# 03

## TOOLS NEEDED (NOT INCLUDED)

### Essential Tools for a Successful Installation:

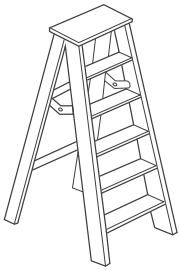

Ladder




Phillips Screwdriver



Wire Stripper

### Optional Tools:

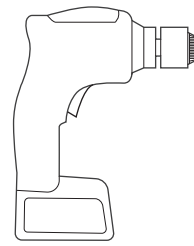


Drill




9/64" Drill Bit

### Check the room dimensions:

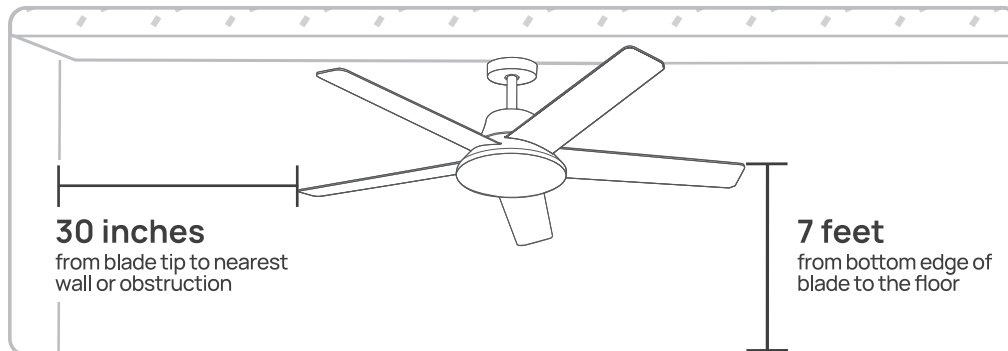

### Check the room ceiling angle:

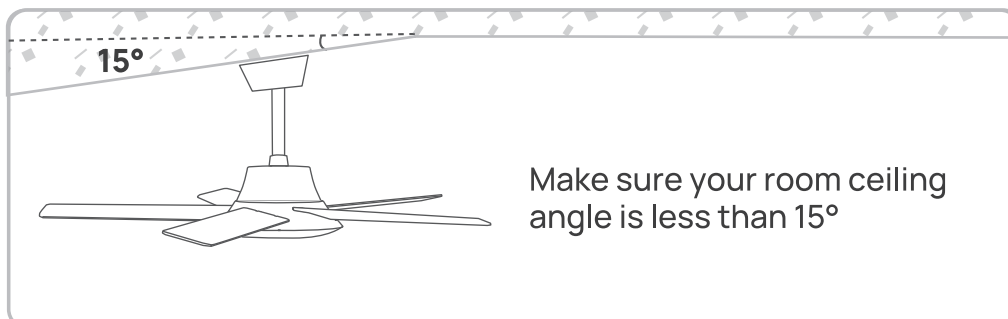

It is recommended to have a partner when installing the ceiling fan.


# ASSEMBLING THE CEILING BRACKET

# 04




## ⚡ WARNING:

To avoid possible electrical shock, before installing your ceiling fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.

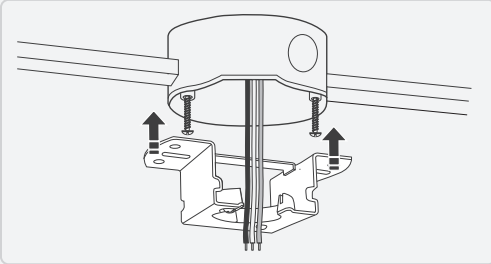

Note:  
Machine screws are **not included** in the shipped package; they are typically provided with your outlet box.

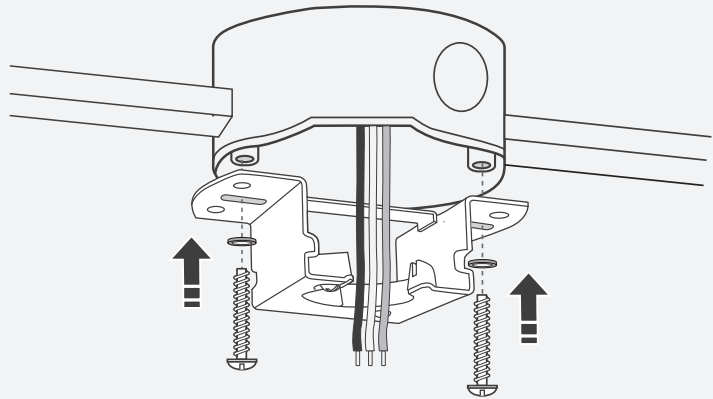


## Option 1:

**Use machine screws (provided with outlet box) when:**

Securing to **existing ceiling fan-rated outlet box.**

Make sure it is securely installed and is acceptable for fan support of 15.9 kg (35 lbs) or less.

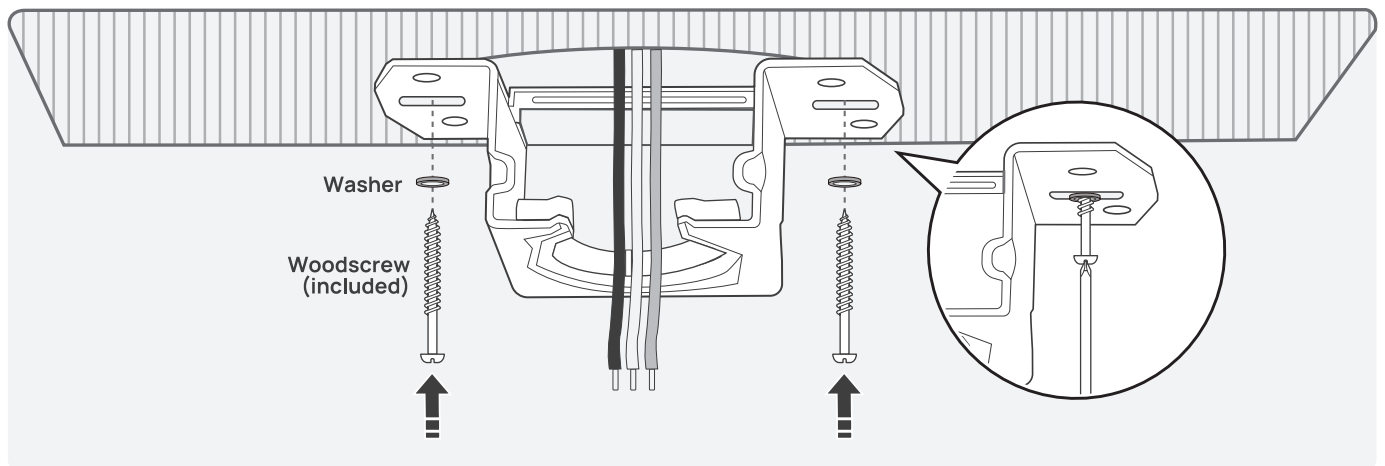

## Option 2 :

**Use wood screws and washers when:**


Securing to support structure with approved electrical outlet box.

**Drill 9/64" pilot holes in Support Structure** to aid in securing ceiling bracket.

**Ceiling Bracket** → Blades → Downrod → Hanging the Ceiling Fan → Light Kit

# ASSEMBLING THE BLADES


# 05

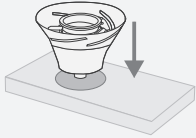

## Gentle reminder:

Turn over the top foam box and place the ceiling fan body upward on its foam cavity when assembling the blades to prevent any damage to the wires.


1

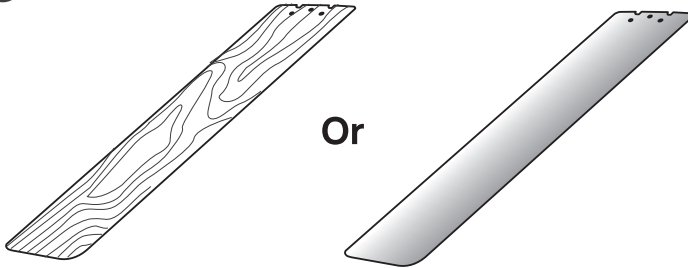

You have the freedom to select either the front or back side according to your preference.


Note: For better performance, utilize the fan blades consistently, whether using the front or reverse side.

2

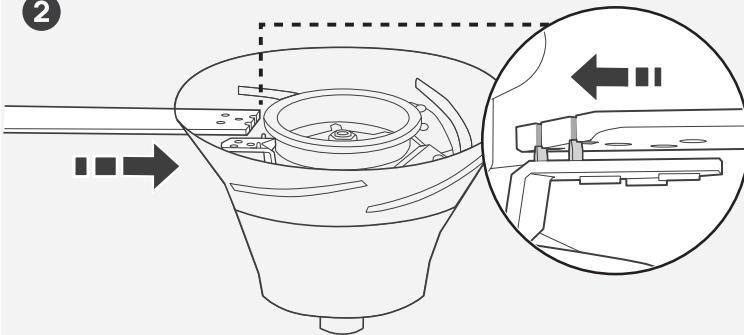

Make sure that the two blade slots align with the vertical tabs in the ceiling fan body.

3

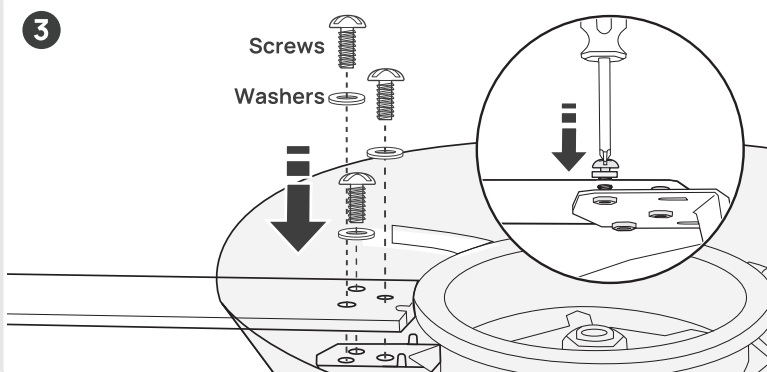

Partially insert the screws and washers into the blade's holes, and then use a screwdriver to securely tighten them.

4



Follow the above two steps to complete the assembly of the remaining four blades.

**NOTE:** Follow the instructions on the blade carefully. Incorrect installation could result in the fan not functioning properly.

Ceiling Bracket → **Blades** → Downrod → Hanging the Ceiling Fan → Light Kit

# ASSEMBLING THE DOWNROD

# 06




## ! WARNING: FAN FALL HAZARD

To prevent SERIOUS INJURY or DEATH:


- ALWAYS tighten setscrew with screwdrivers.
- DO NOT hand tighten setscrew.
- CHECK the setscrew is tight using screwdrivers each time you change fan direction.

1

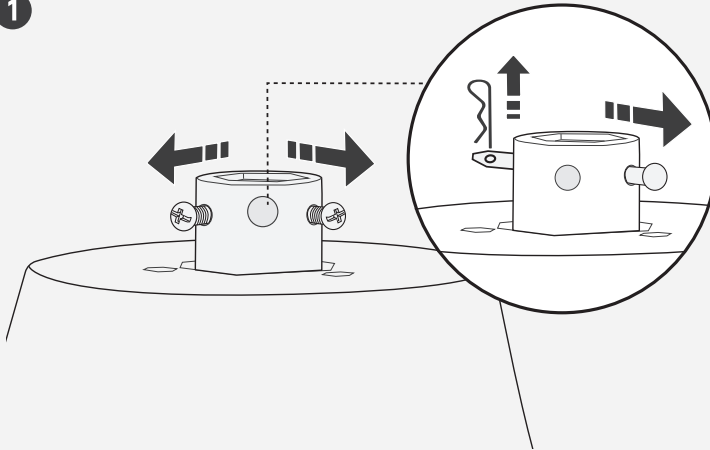

Remove the pre-installed setscrews and downrod **pin**.


2

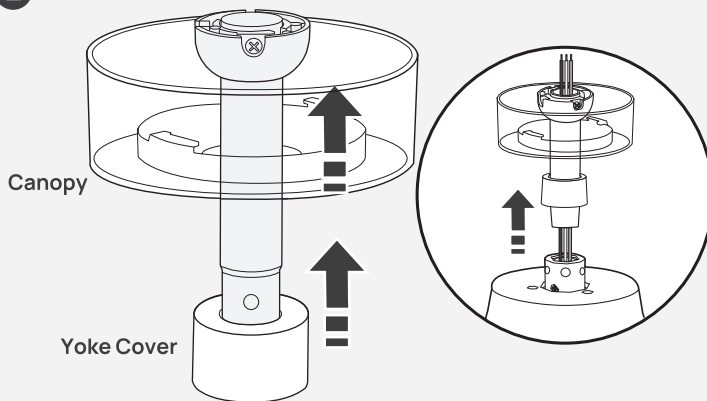

Insert the **canopy** and then the **yoke cover** to the downrod.


Pass all the wires to one side of the horizontal bar in the downrod to prevent excessive wire tangling.

3

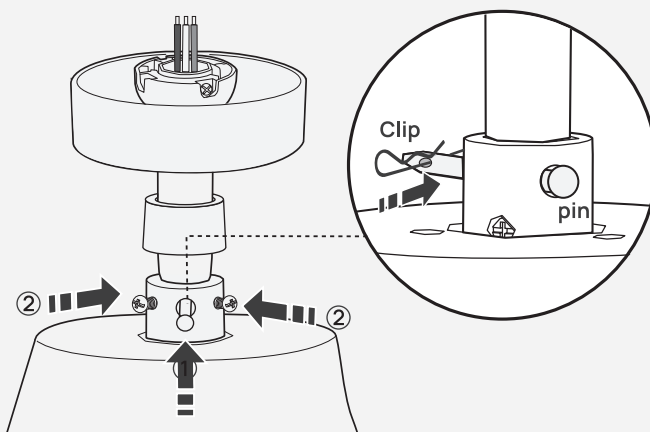


Carefully slide the downrod into the yoke of the motor assembly. Align the holes in the downrod. Carefully re-install the downrod **pin** and **clip**.

Ceiling Bracket → Blades → **Downrod** → Hanging the Ceiling Fan → Light Kit

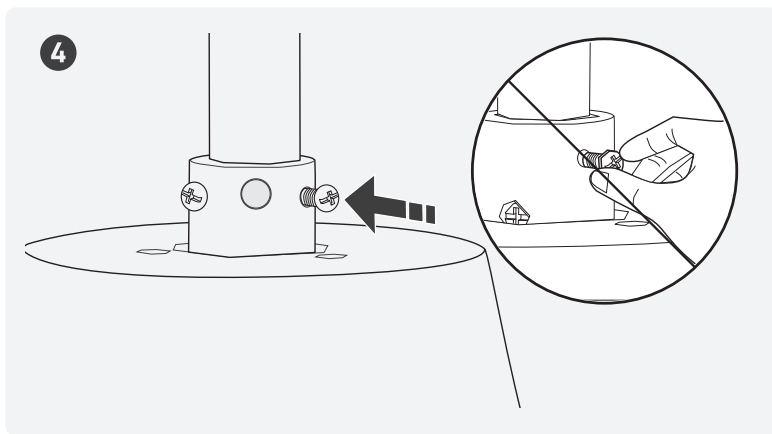





Tighten the setscrew with a screwdriver.

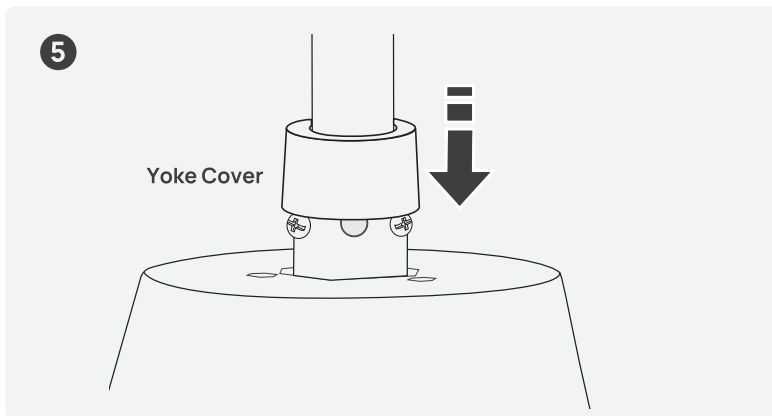

Put down the yoke cover.

**Note:** Please lift the canopy and yoke cover to avoid interference with your installation when you are tightening setscrew.


The downrod ball has been pre-installed on the 6-inch downrod. If you wish to move it to the 4-inch downrod, please follow these steps.

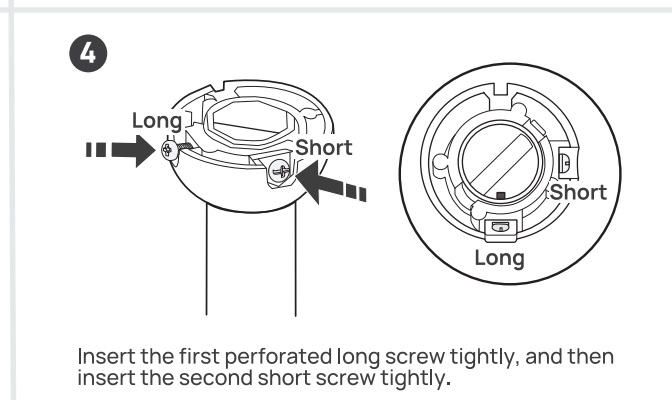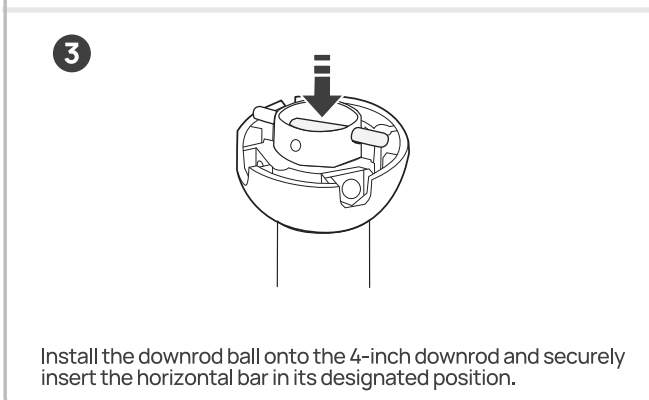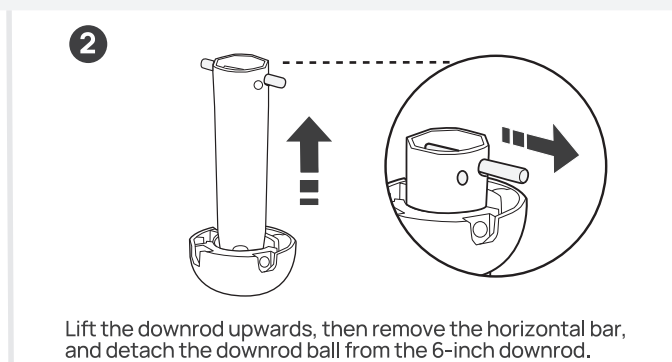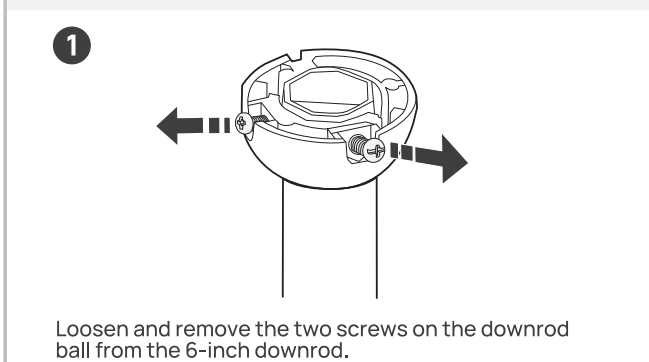

Ceiling Bracket → Blades → **Downrod** → Hanging the Ceiling Fan → Light Kit

# HANGING YOUR CEILING FAN


# 07

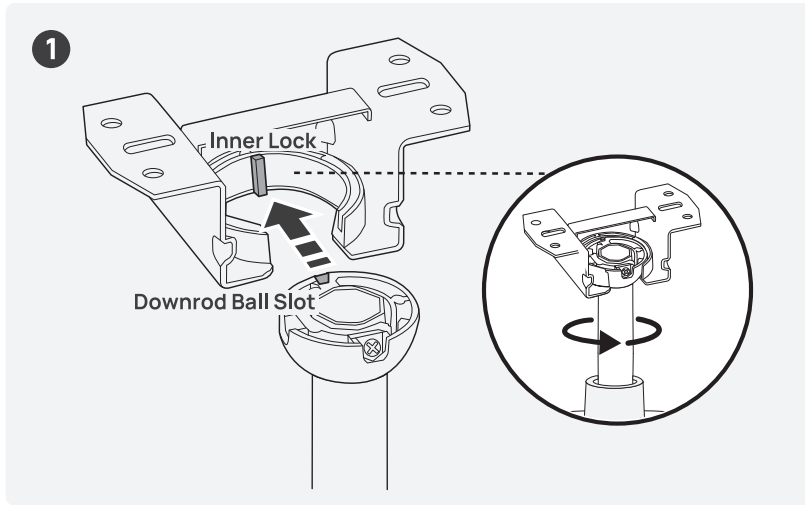

Place the downrod ball into the ceiling bracket.

Make sure the **downrod ball slot** matches the **inner lock**.


**Rotate the downrod until it's secured.**

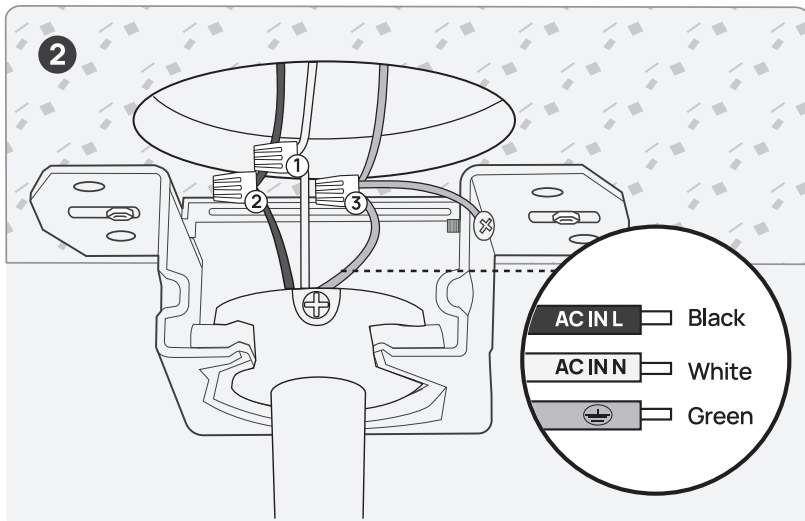

1. Connect the white (grounded) wire from the ceiling to the white wire from the fan.

2. Connect the black (ungrounded) wire from the ceiling to the black wire from the fan.

3. Connect the three grounding wires (green, green/yellow stripe, or bare copper) coming from the ceiling, downrod, and hanging bracket.

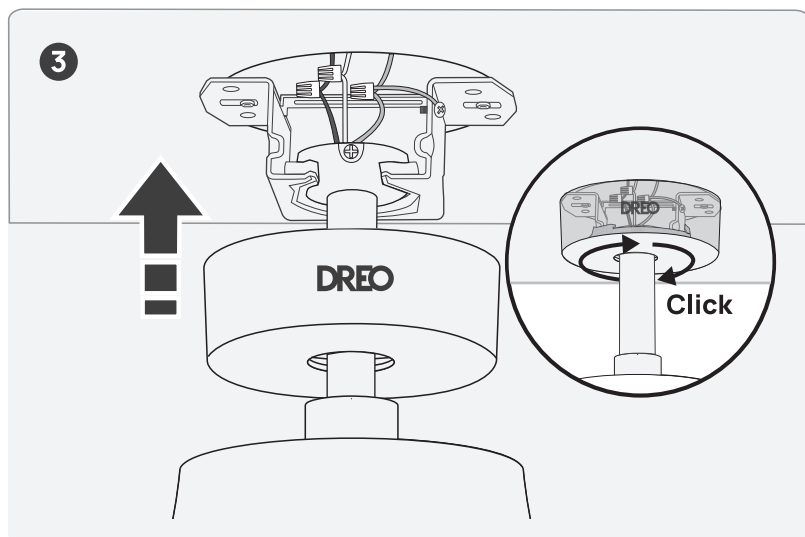

Rotate the canopy clockwise (from your bottom view ) to securely fasten it to the ceiling bracket (You will hear a “click”).



**Note: Please check if the ceiling fan has been properly installed before use.**

Ceiling Bracket → Blades → Downrod → **Hanging the Ceiling Fan** → Light Kit

# ASSEMBLING THE LIGHT KIT



# 08

1

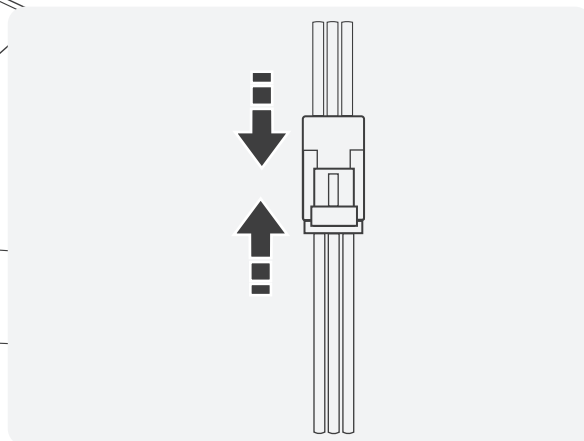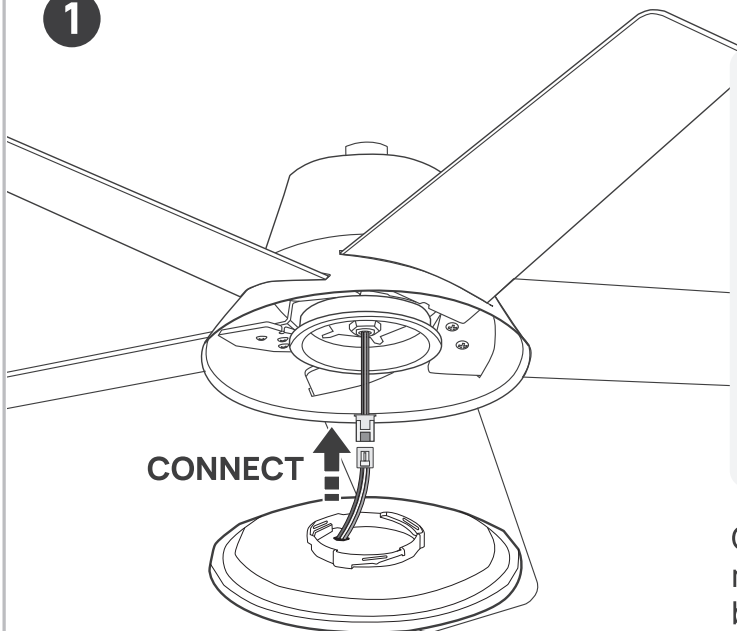

Connect the ports of the wires with matching colors from the ceiling fan body to the light kit.

2

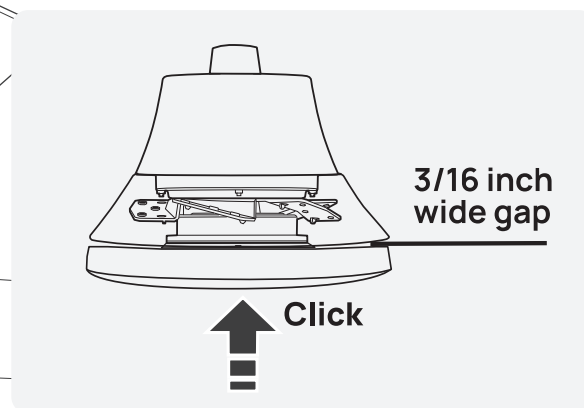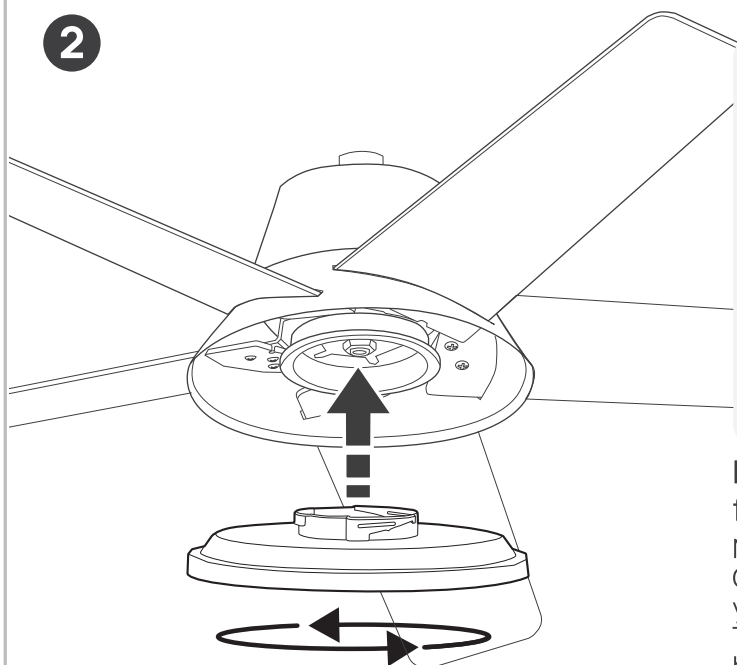


Rotate the light kit clockwise to securely fasten it into place.

Note:

Once you have successfully secured the light kit, you will hear a distinct 'click'.

There is a approximately 3/16 inch wide gap between the middle ring and the light kit.

Ceiling Bracket → Blades → Downrod → Hanging the Ceiling Fan → **Light Kit**

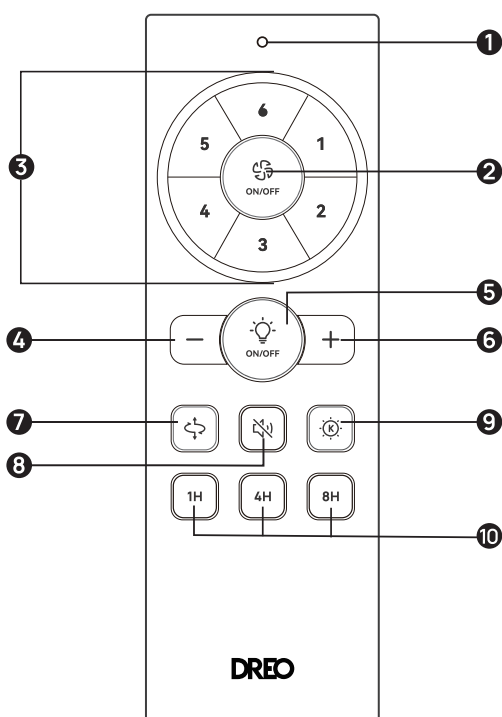

- ❶ Command Indicator
- ❷ Fan Power Button (On/Off)
- ❸ Fan Speed Settings (1 to 6)
- ❹ Decrease Brightness Button
- ❺ Light Power Button (On/Off)
- ❻ Increase Brightness Button
- ❼ Airflow Direction Button
- ❽ Mute Button
- ❾ Light Temperature Button
- ❿ Quick Timer Settings (1H - 4H - 8H)
- ❺ + ❾  
WiFi Connection/Disconnection  
(Long press 3 Seconds)  
Touch 8H repeatedly 5 times to restore factory settings.


**Note:**  
When the remote control battery is low, the command indicator light will flash for a few seconds.

## Remote Control Pairing

The remote control that shipped with your fan is already paired.

**Note:** When pairing a new remote control, you **MUST** disconnect power (at the wall switch, breaker, or fan from other ceiling fans within range) to prevent faulty operation.


### Pairing a new remote control to an existing fan

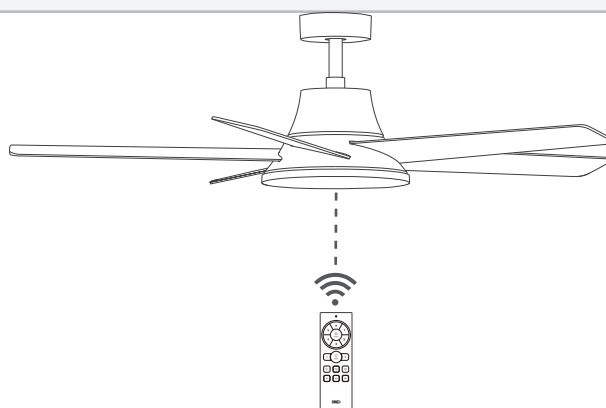

If you lose your remote control or purchase a new one, please follow the steps below to pair the control to your ceiling fan.

- Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button  and the Fan Power Button  on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on the the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.


## Installing one fan operating on multiple remote controls

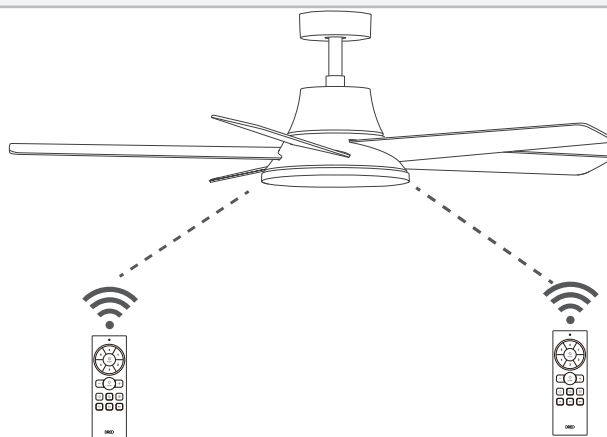

To have multiple remote controls operate one fan, you must pair each additional control to the receiver in the fan. The remote control that shipped with your fan is already paired.

- For each additional control, power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button  and the Fan Power Button  on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on and the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.


## Installing multiple fans operating on a single remote control

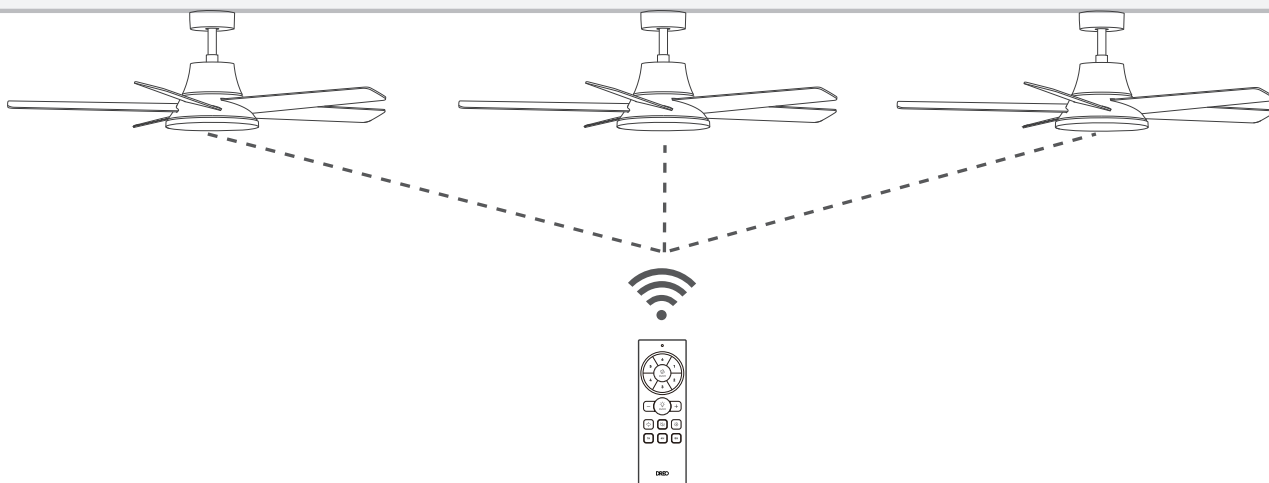

To have multiple fans operated by a single remote control, you must pair the remote control to each additional receiver. The receiver that shipped with your fan is already paired to the remote control.

- For each additional fan, ensure that a compatible receiver is installed. Disconnect power from all other fans while pairing.
- Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within three minutes, long press the Light Power Button  and the Fan Power Button  on your remote for 3 seconds to pair it.
- If applicable, the fan will turn on and the lights will flash and stay on for three seconds, along with a continuous beep to indicate successful pairing.

## Battery Replacement

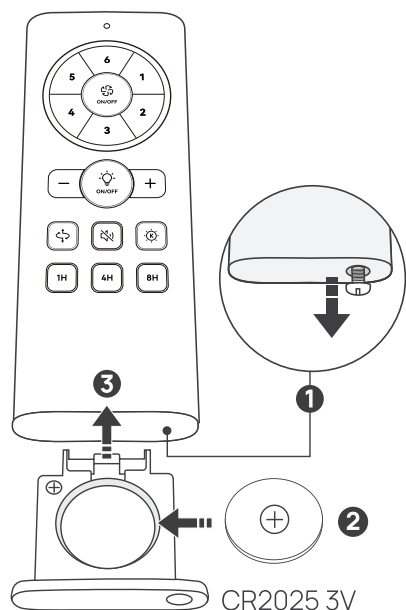

1. Unscrew the locking button with a Phillips screwdriver to remove the battery holder.
2. Replace with the same battery type with the (+) side facing up.
3. Push the holder in and tighten the screw until it is securely locked into place.

Note: If the indicator on the remote control doesn't turn on anymore, please consider replacing the battery.

## ! WARNING




- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type: CR2025.
- Battery nominal voltage: 3.0 Vdc
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (rated temperature: 140 °F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## Install the Remote Control Holder

### Option 1:

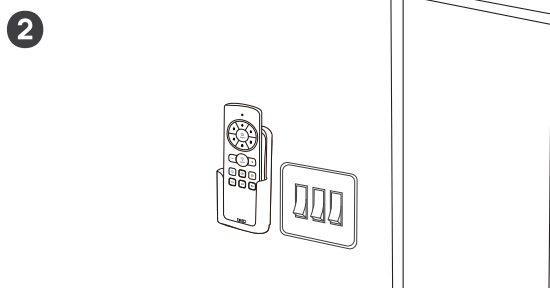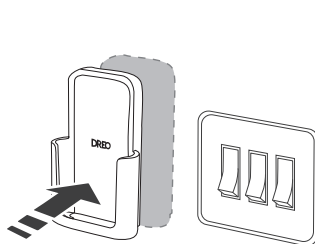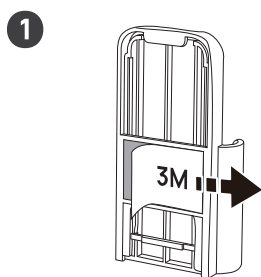


Peel off the 3M glue on the back of the holder to adhere it to the desired location.

Store your remote control.


## Option 2:

1

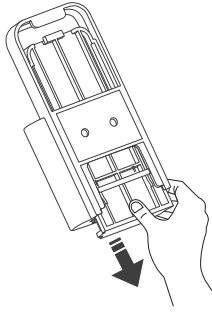


Slide the backboard downward to remove it.

2

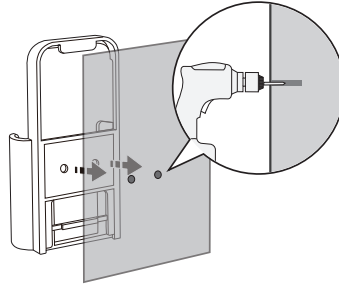


Use the two holes on the holder as a guide to drill two corresponding holes in the flat wall.

3

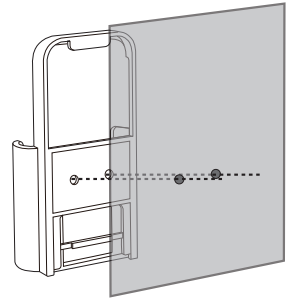


Align the two holes on the holder with the two holes on the wall.

4

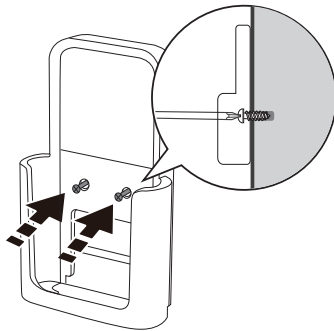


Insert the two screws into the holes and tighten them using a screwdriver.

5

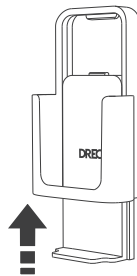

Slide the backboard upward to reposition it.

6

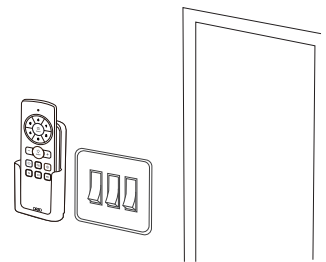

Store your remote control.

## Additional Features



### Memory

If the fan is turned OFF or disconnected from power, it will operate under the previous settings (except the timer setting) when it is turned ON again.



### Timer

When the ceiling fan is ON/OFF, touch the timer button **1H** **4H** **8H** on the remote control to set a timer (1H, 4H, 8H).

When the timer ends, the ceiling fan will stop/start running automatically.



### Mute

Press the mute button  on the remote control to turn on/off button sounds.



### Soft Light Mode

Long press the color temperature button  for 3s seconds.

# CONNECTING YOUR CEILING FAN

# 10

This device includes the radio transmitting module whose CMIIT ID is FCC ID: 2A3SYCF001S.



Before connecting the appliance to your mobile device, please scan the QR code on the left or go to the app store and search “**Dreo**”, then select and download the app.



Download on the  
**App Store**



GET IT ON  
**Google Play**

Look for “ CLF521S” when connecting your new ceiling fan.



You can use the Dreo app to connect your ceiling fan to  
**Amazon Alexa** or **Google Home**.

Please follow the in-app instructions to set up your voice assistant.


NOTE: You must create a Dreo account to access voice assistants.

- 1** Launch Dreo and sign in or create account by following in-app instructions.
- 2** Enable Bluetooth on your mobile device and plug in your ceiling fan.
- 3** Hold the light power button  and color temperature button  on remote control for 3 seconds to start WiFi connection.  
(The ceiling fan light will dim intermittently during the pairing process.)
- 4** Tap + **Add Device** and select **CLF521S**.
- 5** Follow in-app instructions to complete WiFi connection.
- 6** You're now ready to control the appliance on your app.


To restart network setup, hold the light power button  and color temperature button  again for 3 seconds.

# CLEANING AND MAINTENANCE

# 11

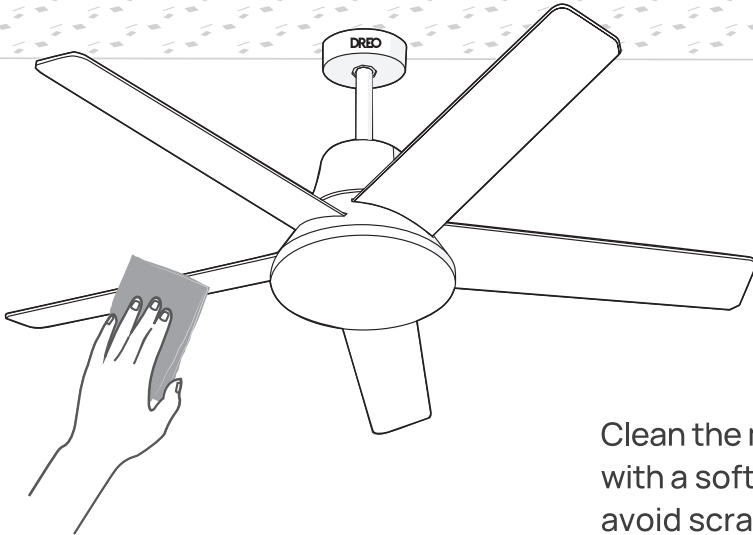

Clean the motor housing and blades with a soft brush or lint-free cloth to avoid scratching the finish.

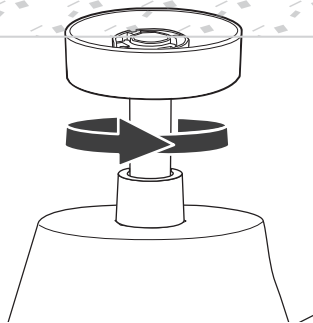

At least twice each year, lower the canopy to check the downrod assembly and tighten all screws on the fan.



- Shut off the main power supply before you begin any maintenance task.
- **DO NOT** use water or a damp cloth to clean the fan.
- Cleaning products may damage the finishes.

| Problem                          | Solution                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fan Doesn't Work                 | <ul style="list-style-type: none"><li>• Make sure the power switch is on.</li><li>• Check the circuit breaker to ensure the power is turned on.</li><li>• Make sure the blades spin freely.</li><li>• Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.</li></ul> |
| Excessive Wobbling               | <ul style="list-style-type: none"><li>• Make sure the blades are properly installed on the blade iron posts.</li><li>• Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.</li></ul>                                                                                                             |
| Remote Control of Fan is Erratic | <ul style="list-style-type: none"><li>• Make sure the battery is installed correctly. If the command indicator light keeps flashing, indicating low battery, install a fresh battery.</li></ul>                                                                                                                                                |
| Remote Only Works Close to Fan   | <ul style="list-style-type: none"><li>• Change battery</li></ul>                                                                                                                                                                                                                                                                               |
| Noisy Operation                  | <ul style="list-style-type: none"><li>• Make sure the blades are properly installed.</li><li>• Check to see if any of the blades are cracked. If so, replace all of the blades.</li></ul>                                                                                                                                                      |

If your problem is not listed or still persists,  
please contact our Customer Support (see page 17)

## Default 12-Month Warranty

This appliance is covered by Dreo warranty for 12 months from the date of its original purchase.

## Extend Your Warranty

Extend your warranty by registering your new appliance on our website  
<https://dreo.com/warranty>

## The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by DREO.

We can only provide after-sales service for products that are sold by DREO or DREO authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Model No.: DR-HCF001S  
Rev\_1.2\_EN

## We're Here to Help!



(888) 290-1688 Mon - Fri, 9:00 am-5:00 pm PST/PDT



support@dreo.com



www.dreo.com



Shenzhen Hesung Innovation Technology Co., LTD



26F, Bldg A7, Creative City, Shenzhen, China



MADE IN CHINA



Intertek  
5017816

[www.dreo.com](http://www.dreo.com)

## Looking for help?

Contact us to get expert support.



[support@dreo.com](mailto:support@dreo.com)



[\(888\) 290-1688](tel:(888)290-1688)



[www.dreo.com](http://www.dreo.com)

Mon - Fri, 9:00 am - 5:00 pm PST/PDT